

# ROYAL AIRBRUSH

SPECIFICATIONS	AB-135	AB-135A	AB-135B	AB-135C
Nozzle diameter:	0.2mm			
Fluid Cup capacity:	2cc			

## APPLICATIONS

Commercial arts, illustrations, photo retouching, hobby and crafts

## HOW TO SPRAY


1. Fill fluid in the cup after thinning appropriately.
2. Hold the airbrush lightly in your hand.
3. By pressing the main lever, a stream of air emerges. Then draw it backward gradually for Color atomization.
4. The spray pattern is in accordance with the distance between a work surface and a air brush.
5. For fine line spray, remove the needle cover and hold the air brush near a work surface.

## MAINTENANCE

Empty the fluid cup and wash with water or solvent by a brush.

Refill cup with water or solvent, then block the needle cover with a finger and spray. The air flows backward into nozzle to clean the paints remained the air brush.

AIRBRUSH MECHANISM

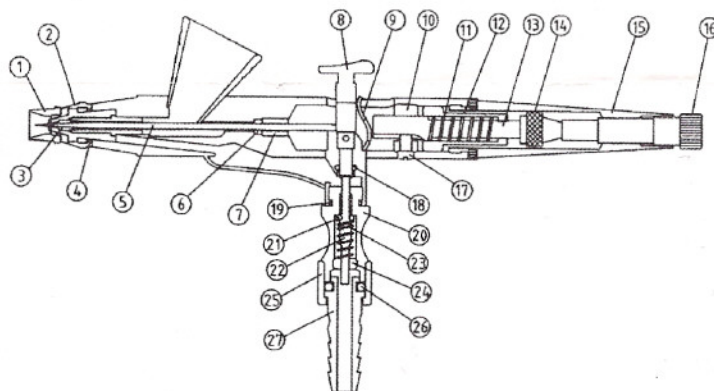

Parts Name

1. Needle Cap
2. Nozzle Cap
3. Nozzle
4. O-Ring for Nozzle Cap
5. Needle
6. O-Ring for Needle Guide
7. Needle Guide
8. Operation Lever
9. Lever Guide
10. Stopper
11. Spring
12. Spring Case
13. Needle Chucking Guide
14. Needle Chucking Net
15. Standard-Handle Adjusting
16. Adjusting Screw
17. Guide Screw
18. Lever Guide O-Ring
19. Valve O-Ring
20. Valve Body
21. Valve Rod O-Ring
22. Valve Rod
23. Valve Spring
24. Valve Screw
25. Hose Connector Nut
26. O-Ring for Hose Connector
27. Hose Connector
28. Nozzle Spanner

PARTS DETAILS

